

ASSEMBLY AND INSTALLATION INSTRUCTIONS

PD35491


WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

Installation Steps

1. Thread two screws to the mounting strap, and secure with two lock nuts. **(You can adjust the length of the screws if necessary)**
2. Attach the mounting strap to ceiling box by using two mounting screws.
3. Rod connections:
 - a. Thread the fixture wire from the glass holder through the down rod and secure the down rod with the nipple.
 - b. Thread the fixture wire from the down rod through the middle rod and secure the middle rod with the nipple.
 - c. Thread the fixture wire through the upper rod, and then secure the upper rod with the nipple.

***The height can be adjustable to 22-1/2", 32" or 41-1/2" by using the rods.**
4. Thread the fixture wire through the canopy, and secure the upper rod to the canopy with the set nipple.
5. Make wire connections with wire nuts:
 - The black wire from fixture to the black wire from power source.
 - The white wire from fixture to the white wire from power source.
 - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.Carefully tuck wires back into the ceiling box.
6. Attach the canopy to the mounting strap by inserting the screws, and secure with two bolt nuts.
7. Attach the glass shade to the glass holder, and then secure with the socket ring.
8. Install a bulb. **(Please do not exceed the maximum capacity that is recommended on the package)**
9. Turn on the power at fuse or circuit box.

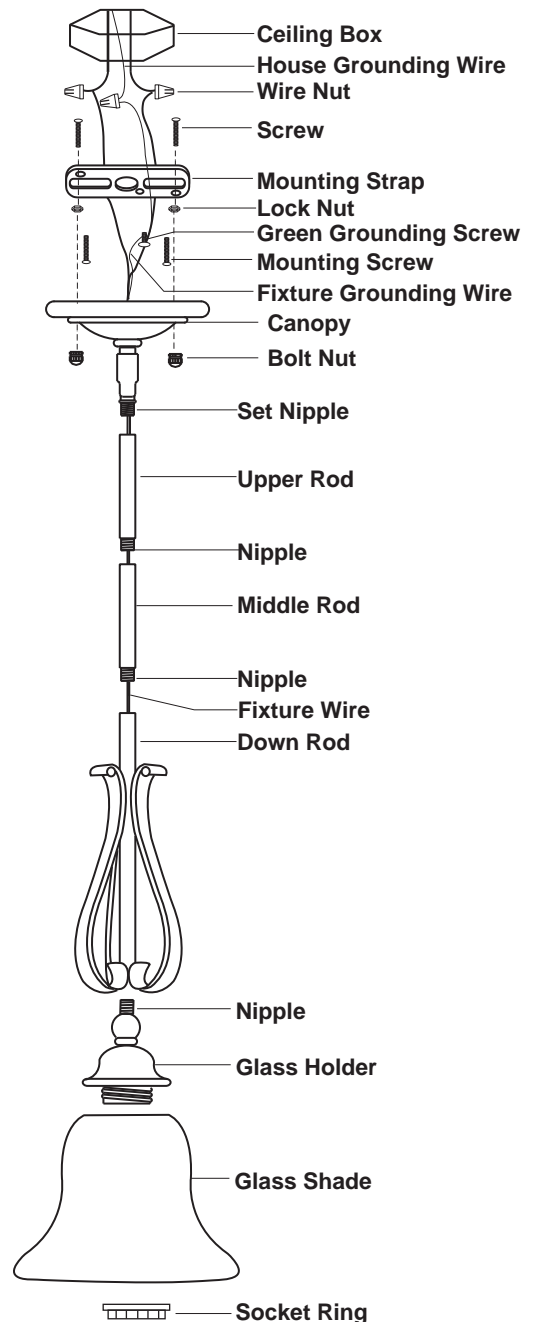

VAXCEL
LIGHTING

050701